



- 1** Apply roof leaving the required opening for the ridgilator (approximately 2").
- 2** Install the ridge cap up to the section left open for the ridgilator.
- 3** Each ridgilator contains 2 end flanges and 1 connector flange.
  - 3.1** Install end flanges on the inside of the vent end panel as shown above.
  - 3.2** Connector flanges are used between vents when running vents continuously (do not use end flange here). Butt the two vents together with the connector flange underneath the joint. Both vent end panels fit between the two tabs on the connector flange.
- 4** Install the foam closure (do not block drainage holes in roof flange)
- 5** Fasten the ridgilator to the ribs of the roofing panel and apply a generous bead of sealant between the ridge cap and the vent end flanges/ connector flange.



73000 Airport Line  
R.R #2, Box 137  
Hensall, Ontario  
N0M 1X0

Fax: (519) 263-3108  
Phone: (519)-263-3107  
Toll Free: 1-888-763-7779  
[www.easybuildingproducts.ca](http://www.easybuildingproducts.ca)

May 20, 2014