


- 1** Apply eave fascia and soffit to building first. (Apply it flush with the end of the building)
- 2** Make two notches in the corner cap to accommodate the soffit lap.
- 3** Apply corner cap as shown. Lap the eave fascia and soffit.
- 4** Fold excess metal on to the top of the roof purlin.
- 5** Apply gable fascia and soffit last. Allow it to go down and butt the corner block underneath on the soffit and lap slightly to the face.



73000 Airport Line
R.R #2, Box 137
Hensall, Ontario
N0M 1X0

Fax: (519) 263-3108
Phone: (519)-263-3107
Toll Free: 1-888-763-7779
www.easybuildingproducts.ca

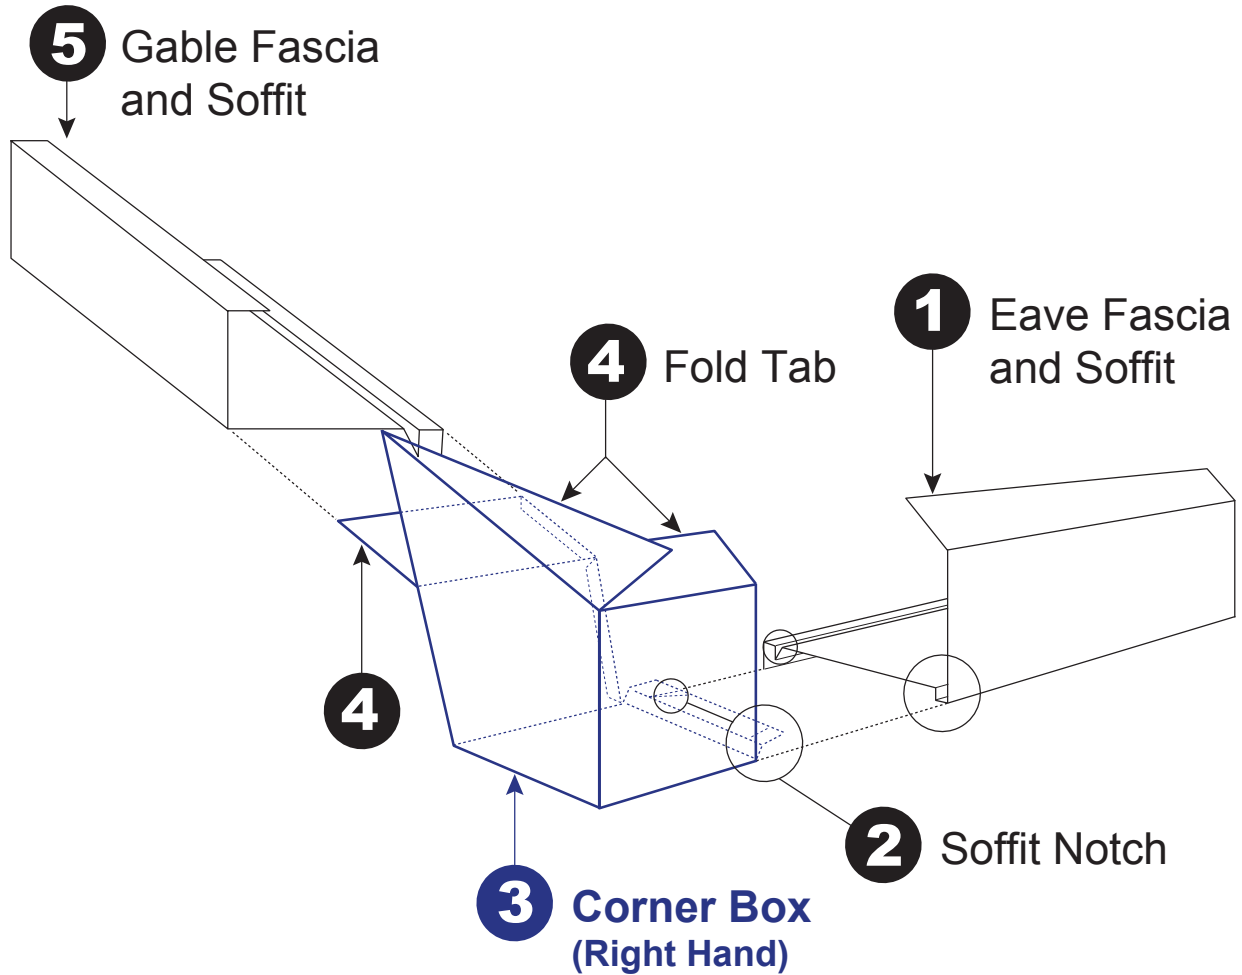

- 1** Apply eave fascia and soffit to building first. (Apply it flush with the end of the building)
- 2** Make two notches in the corner box to accommodate the soffit lap.
- 3** Apply corner box as shown. Lap the eave fascia and soffit.
- 4** Fold excess metal on to the top of the roof purlin.
- 5** Apply gable fascia and soffit last. Allow it to go down and butt the corner block underneath on the soffit and lap slightly to the face.



73000 Airport Line
R.R #2, Box 137
Hensall, Ontario
N0M 1X0

Fax: (519) 263-3108
Phone: (519)-263-3107
Toll Free: 1-888-763-7779
www.easybuildingproducts.ca